

**Teknatool International Limited**

7D Dallan Place, Rosedale, Auckland, New Zealand

Tel: +64 09 477 5600 Fax: +64 477 5601

Email: [service@teknatool.com](mailto:service@teknatool.com)Website: [www.teknatool.com](http://www.teknatool.com)

## Frequently Asked Questions

### How to remove the headstock on the Galaxi DVR 1644 lathe

Date Raised: 31 January 2017

Safe practices should always be employed to ensure the Health and Safety of yourself, employees and customers (if applicable) Refer to product manuals, exploded drawings and our website if further assistance is required, or contact us on [service@teknatool.com](mailto:service@teknatool.com)


Date Amended

**WARNING:****Headstock of a lathe is very heavy****Do not attempt to remove the headstock off the lathe on your own****Tools required:**

1 x adjustable wrench

**Procedure:****Before starting, ensure that the lathe is disconnected from the power source.**

Unscrew the nut which holds the head lock plate in place (shown in image below). When the nut and headlock plate is removed, the headstock can be removed from its bed.

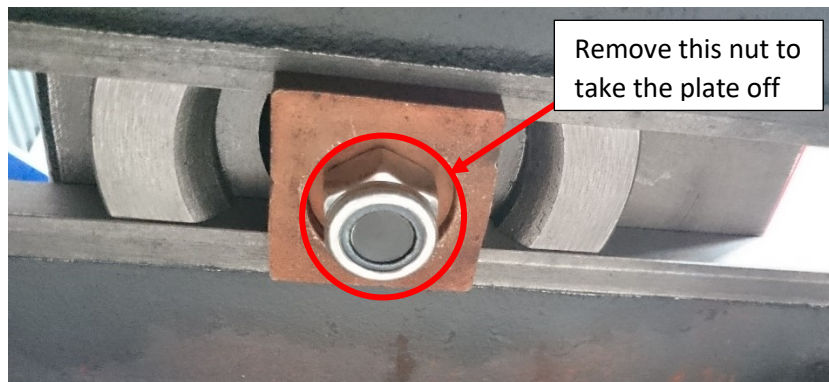

*Figure 1: View of NOVA Galaxi 1644 from beneath*

**Note:**

To remove the headstock from the bed, lift it vertically off the bench. Make sure that the head lock bolt (bolt where the nut was on) does not get damaged when putting the headstock down.