

Teknatool International Limited

7D Dallan Place, Rosedale, Auckland, New Zealand

Tel: +64 09 477 5600 Fax: +64 477 5601

Email: service@teknatool.comWebsite: www.teknatool.com**Frequently Asked Questions****Changing the Units on the NOVA Voyager**

Date Raised: 27 February 2017

Safe practices should always be employed to ensure the Health and Safety of yourself, employees and customers (if applicable) Refer to product manuals, exploded drawings and our website if further assistance is required, or contact us on service@teknatool.com

Date Amended

Two different unit standards can be used on the NOVA Voyager (Metric and Imperial). The conversion between these 2 units can be done simply.

Step No.	Description	Image
1.	Press the <Menu> key then navigate to "Configurations" using the dial knob.	
2.	Select "Drill Setting" and press the dial	
3.	Inside "Drill Settings" the second option will have the option of "Units" . Select the "Units" row and press the dial to change the units to Imperial (or Metric)	

4. Press **<Menu>** twice to return to the home screen.

You should see that the units have changed.

