

**Teknatool International Limited**

7D Dallan Place, Rosedale, Auckland, New Zealand

Tel: +64 09 477 5600 Fax: +64 477 5601

Email: [service@teknatool.com](mailto:service@teknatool.com)Website: [www.teknatool.com](http://www.teknatool.com)**Frequently Asked Questions****How to set password on NOVA Voyager Drill Press**

Date Raised: 21 March 2017

Safe practices should always be employed to ensure the Health and Safety of yourself, employees and customers (if applicable) Refer to product manuals, exploded drawings and our website if further assistance is required, or contact us on [service@teknatool.com](mailto:service@teknatool.com)

Date Amended

To set the password on the NOVA Voyager:

Procedure:


Step No.	Description	Image
1.	<p>On the home screen press &lt;Menu&gt;</p> <p>Navigate down to “Configuration” by turning the dial.</p> <p>Press the dial in to enter</p>	
2.	<p>Navigate down to “Set Password” by turning the dial.</p> <p>Press dial to enter</p>	

3. You will be prompted to enter your password into the system.

Pressing each of the **function (F) key** will change the number in the corresponding digit.

Starting from the left-hand side the F keys change the following digit.

<F1>: First digit  
<F2>: Second digit  
<F3>: Third digit  
<F4>: Fourth digit

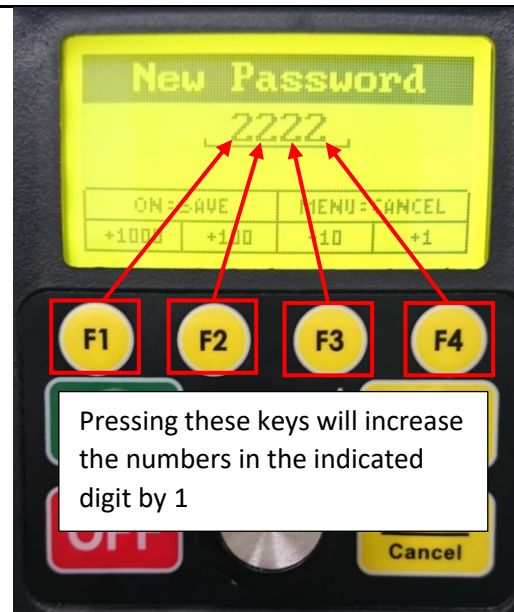

4. Once your password is set press the <ON> key to save the password into the drill press system and enable it.

Or press <Menu> key to cancel and exit out of the password setting screen. This will not save the password into the system and will not enable the password.

**Note:**

If you have made a mistake when setting your password (e.g. pressed the function key one extra time), you can clear it by pressing the <OFF> key. This will take you back to the home screen but it will clear the password to the default "0000"

**\*You will have to press the <ON> key after setting your password to enable it.\***

After saving your password in the Drill Press system the drill press will look and behave in the same way as before.

Press this key to save and enable the password

Press this key to exit without setting the password




5. To check if your password has been setup correctly, **turn off your drill press.** Wait about a minute for the internal circuits to discharge.

Turn the drill press back on. After the initial start-up screen, you will be prompted to enter your password.

**Note:**

To enter your password to use the drill press, use the keys <F1>~<F4> to change the number on each digit (same as step 3). Press <ON> to enter the usual function of the drill press.

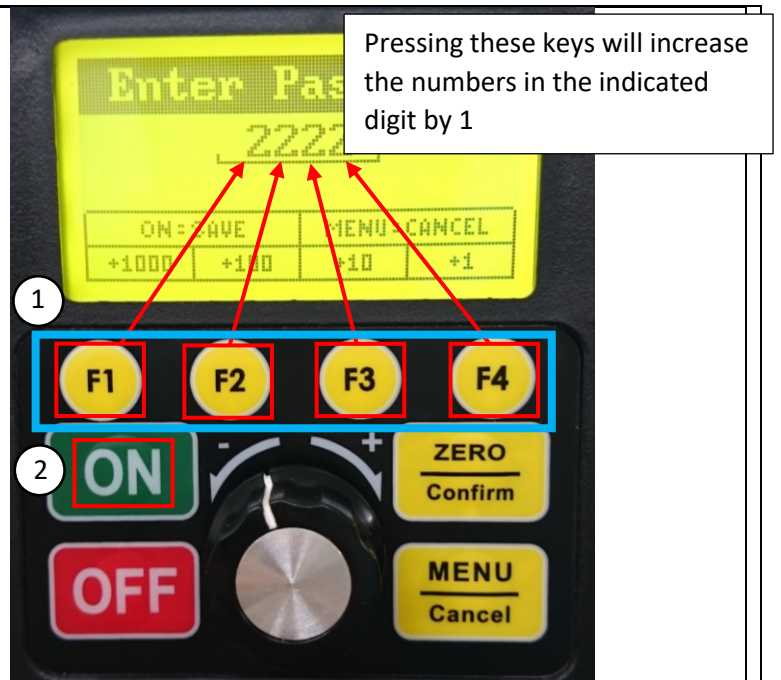

**\*To clear the password from the system (If you do not want to enter password every time on start-up) a factory reset has to be carried out\***