

## Teknatool International Limited

7D Dallan Place, Rosedale, Auckland, New Zealand

Tel: +64 09 477 5600

Fax: +64 477 5601

Email: [service@teknatool.com](mailto:service@teknatool.com)

Website: [www.teknatool.com](http://www.teknatool.com)



## Frequently Asked Questions

Date Raised: 18 Dec 2020

Date Amended:

Safe practices should always be employed to ensure the Health and Safety of yourself, employees and customers (if applicable) Refer to product manuals, exploded drawings and our website if further assistance is required, or contact us on [service@teknatool.com](mailto:service@teknatool.com)

## How to check DC Voltage Parameters on a DVR Saturn

1 Enter Service mode.

Please refer to the ***"How to enter Service mode on NOVA DVR Saturn"*** FAQ.

2 From the main screen, press <Program P> 11 times until you get to the page with the parameters showing.

Check that the value for "VD" should fluctuate around **360v**.

Check that the value for "VDLowLim" should be at **300v**.



3 Press <Program P> again to go to the next page and check the values:

UVtSdSTP = **345v**

UVtSdRun = **220v**

